




Great British  
Blinds  
GREAT BLINDS, GREAT PRICES

## Measuring Guide For Aluminium Blinds Inside & Outside Recess

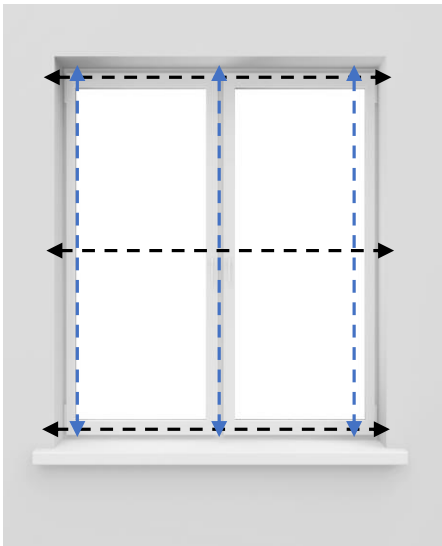


### How to measure for recess size

This is the measurement you need to make if the blind needs to fit inside the window recess.

Measure the width and the drop in three different positions ensuring you provide us with the smallest measurement in millimetres. Please ensure you take a width measurement from the very top of the recess. If you have any tiles, picture/dado rails etc you will need to measure between these and this will be classed as your smallest measurement.

We will make any necessary deductions to ensure the blind fits neatly within the recess of the window.

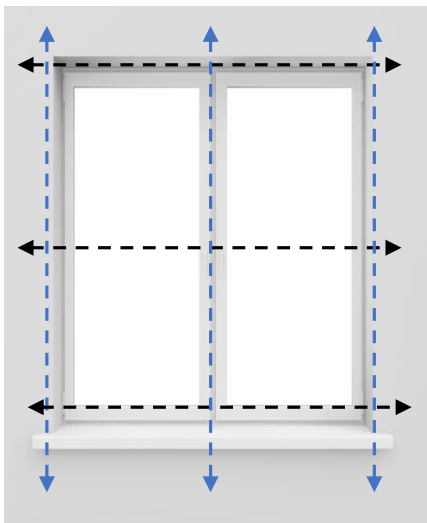

### How to measure for outside fit

This is the measurement you need to make if the blind needs to hang outside the recess overlapping the window.

Decide how much you wish to overlap the recess at each side, we recommend at least 75mm at each side as well as the top and bottom so as to minimise as much external light as possible. Measure the width and the drop in three different positions ensuring you provide us with the smallest measurement in millimetres.

We will not make any deductions from the measurements provided.



Great British  
Blinds  
GREAT BLINDS, GREAT PRICES